


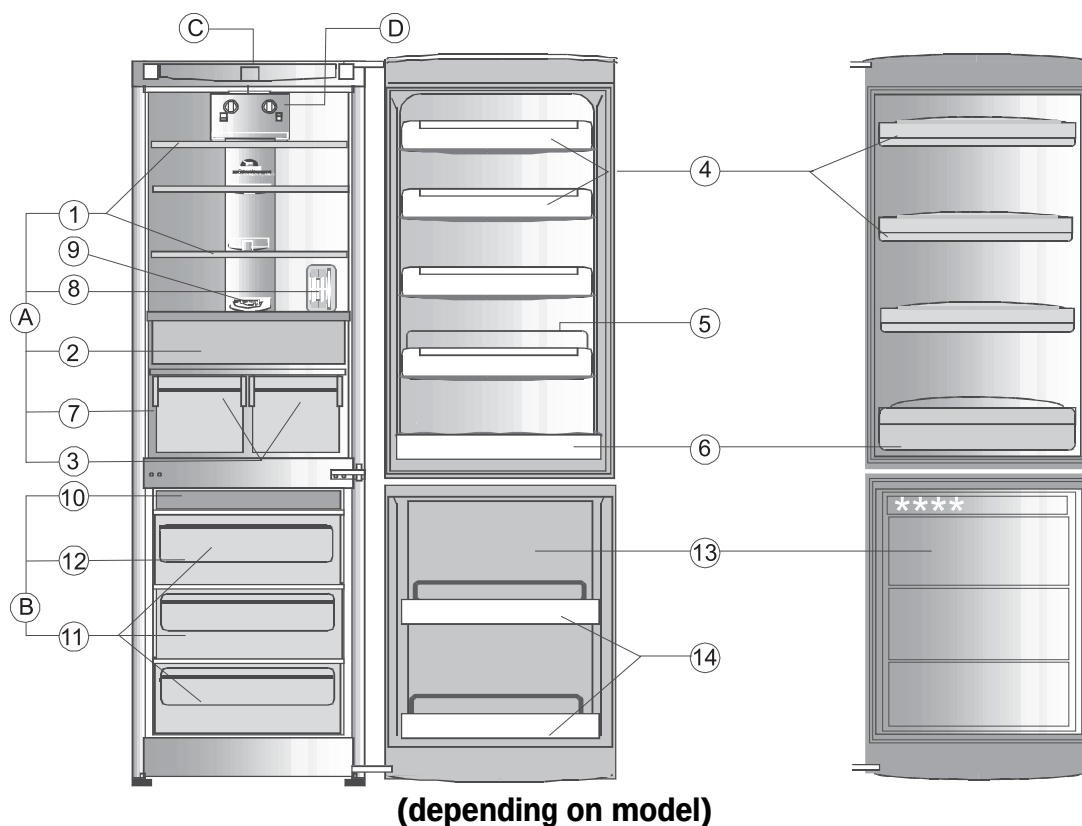

### A. Refrigerator Compartment

1. Height adjustable grid or glass shelf (depending on model)
2. Fresh Control compartment and separators (depending on model)
3. Crispers
4. Door trays
5. Removable bottle restraint
6. Bottle rack
7. Rating plate (at the side of the crispers)
8. Antibacterial filter (depending on model)
9. Air control (depending on model)

### B. Freezer compartment

10. Rack for ice cube trays and/or ice packs (depending on model)
  11. Compartment for storing frozen/deep frozen foods
  12. Area for freezing
  13. Freezer compartment door
  14. Freezer compartment door trays.
- C. Light switch off button**
- D. Internal controls**

#### Antibacterial filter (depending on model)

Antibacterial filter (depending on model) assures the higher level of hygiene in your refrigerator through continuous purifying of circulating air of bacteria. After half a year of using of filter one should change it for a new one. Take out the box and throw away all. Put to the grid new one. This type of filter is available from our After-sales Service.

**Note:** The ambient air temperature, the frequency of opening the door and the position of the appliance can affect the internal temperatures of the appliances. These factors must be taken into account when setting the thermostat.

**Notes:** The number of shelves and shape of accessories may vary, depending on the model.  
All shelves, door trays and racks are removable.

**Important:** Refrigerator/freezer accessories must not be washed in a dishwasher.

**Your** new appliance is a combined ventilated, **No-Frost** fridge-freezer exclusively for domestic use.

Whirlpool Total-no-frost fridge freezers circulate chilled air around the storage areas, reducing humidity to prevent the formation of ice, thereby completely eliminating the need for defrosting. Frozen items don't stick together, labeling stays legible and storage space remains clear. No-Frost's even temperature control also helps keep food fresher for longer.

## HOW TO OPERATE THE REFRIGERATOR COMPARTMENT

### Switching on the appliance

- Plug in the appliance.
- The appliance will automatically start when knob **(2)** is not on position **OFF**.
- The inside light switches on when the refrigerator door is opened.

**To switch off the appliance**, turn the knob **(2)** to **OFF**.

### Important:

- There is no need to adjust the thermostat knob as the temperature is factory set to ensure the correct storage temperature for fresh foods at ambient temperatures between +20°C and +25°C.
- After being switched on, the refrigerator needs approximately 2 hours to reach the correct temperature to store a typical volume of food in the refrigerator compartment.

### To adjust the temperature


Turn the thermostat control knob **(2)**:

- towards position **Min/1** if the temperature within the compartment is too cold
- towards position **Max/7** for colder temperatures
- to position **OFF** to switch off the appliance.

**Recommended thermostat setting; MED/3-4 position.**

### Note:

In models without the "COOL" compartment, air distribution in the lower part of the refrigerator can be adjusted by means of the regulator **(4)**.

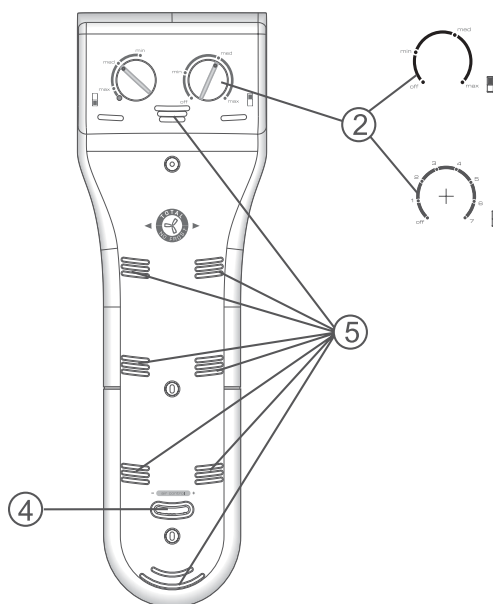

## HOW TO OPERATE THE "COOL" COMPARTMENT (DEPENDING ON MODEL)

**The appliance is equipped with a "COOL" compartment**

To adjust the temperature, use the adjustment button **(4)**

- Towards position **(+)** for cooler temperatures.
- Towards position **(-)** for less cool temperatures.

It is possible to remove the drawer of the **Fresh Control Compartment**.

---

## HOW TO OPERATE THE FREEZER COMPARTMENT

- When the appliance is plugged in, the freezer compartment switches on automatically.

### Important:

- There is no need to adjust the thermostat knob as the temperature is factory set to ensure the correct storage temperature for frozen foods in the freezer compartment at ambient temperatures between +20°C and +25°C.
- After switching on, the freezer compartment takes approximately 3 hours to reach a suitable temperature for frozen food storage.

### To adjust the temperature.


Turn the thermostat control knob (1).

- Towards position **Min/1** for less cold internal temperatures.
- Towards position **Max/3** for colder temperatures.
- To position  to use the fast freeze function.

### Recommended thermostat setting: MED/2 position.

### How to freeze fresh food

1. 24 hours before freezing fresh food, turn the knob (1) to . When turning from **Max/3** to , the knob is slightly stiff and the **YELLOW indicator (3)** near the symbol  lights up simultaneously.
2. Place food in the drawer, leaving enough space for air to circulate around packs.
3. For more efficient freezing, set the knob (2) to **Max/3** and use the fast freeze function for the next 24 hours.
4. When freezing is complete, turn the knob (1) back to its original position.

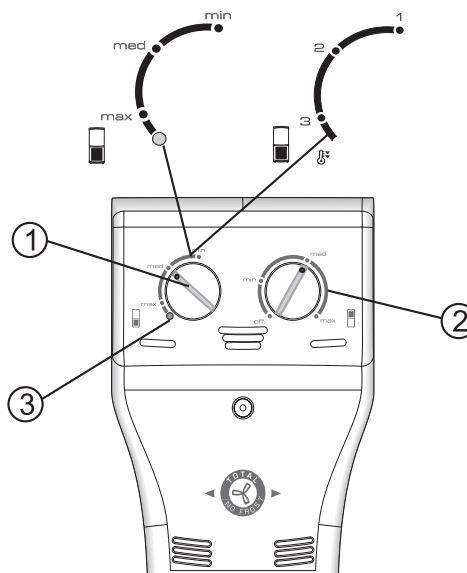

## REPLACING THE LIGHT BULB

**Always disconnect the appliance from the power supply before replacing any light bulbs.**

Next:

- Remove the light cover.
- Pull the bulb towards the outside of the lamp holder.
- Check the bulb and if necessary, replace it.
- Assembly the light cover back pushing it in its place.

This appliance is equipped with special unscrewed bulb.

This bulb is available only from our After-Sale service. Replace using **maximum 15W bulb**.

**Do not leave uncovered bulbs.**

### Cleaning and maintenance

**When cleaning especially with light cover removed, pay special attention to not touch the light bulbs.**